



Transfer Flag Positions to Other Units


1. Press the T-switch to turn the **Programmed** FLAGD unit ON

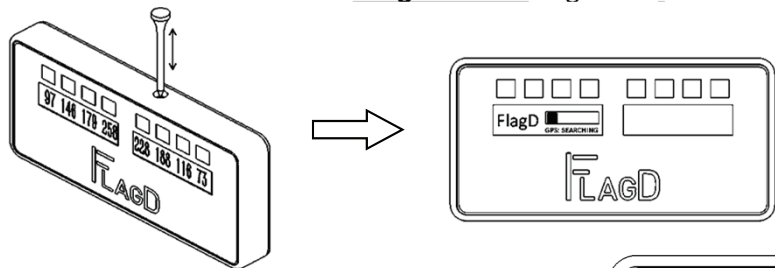


2. Press and HOLD the UP or DN button for 3 seconds to display the Menu then cursor to "TRANSMIT FLAGS"

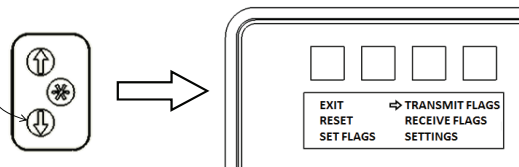


3. Press the * button to put the **Programmed** FLAGD unit into Transmit Mode

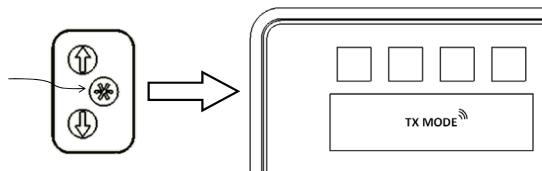


4. Place the **Programmed** FLAGD unit "display up" on a flat surface as shown

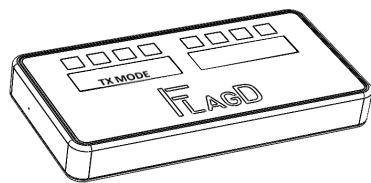


5. Press the T-switch to turn the **Unprogrammed** FLAGD unit ON

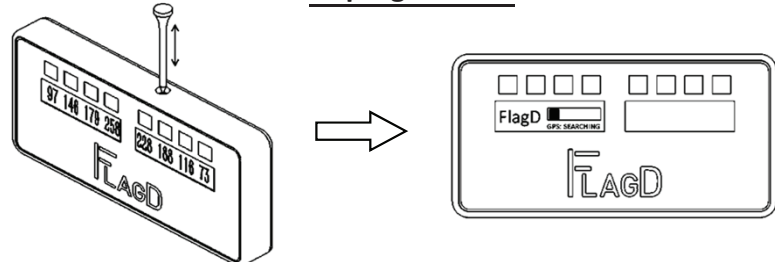


6. Press and HOLD the UP and DN button at the same time for 3 seconds to display "RECEIVE FLAGS" **

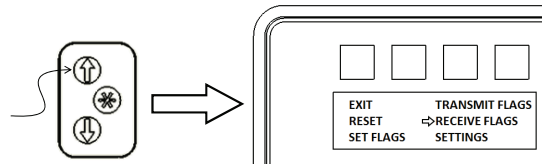


7. Place the **Unprogrammed** FLAGD unit on top of the Programmed FLAGD unit as shown

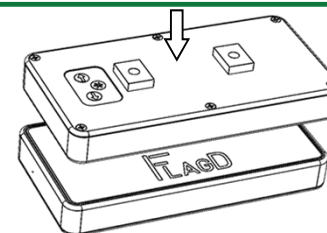

8. Press the * button on the Unprogrammed FLAGD unit and wait for the beep

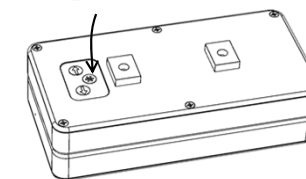


9. Verify that the Unprogrammed FLAGD unit is now programmed

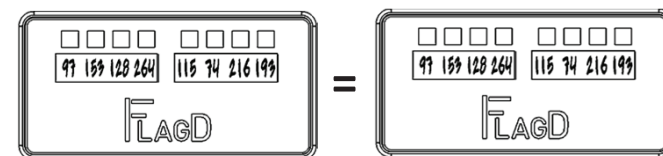

10. Using another unprogrammed unit, repeat steps 5-9 until all units are programmed. When finished, return the Transmit Mode unit used in step 4 to normal by pressing the UP button to return to the Menu, cursor to Exit, then press the * button.

Update Displayed Distances

1. Press and release the recessed T-switch using the tip of a golf tee—the unit will beep

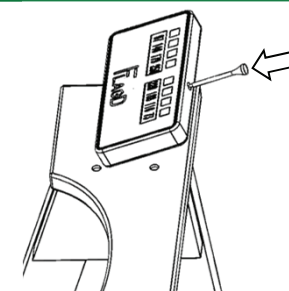

2. Walk away--no further action is required. The unit will automatically turn on the GPS, calculate the distance from the unit to the programmed flags, display the result, then turn off

